# **Drip Feed Lubricators**

BRUSHES		Dimensions in mm		
No	Α	В	С	Body

### ROUND - 1/8" BSP

SPR 6.5	6.5	50	65	Brass
SPR 16	16	30	53	Brass
SPR 25	25	45	70	Brass
SPR 30	30	45	70	Brass

#### FLAT - 1/8" BSP

SPF 57	57	30	50	Aluminium


Spare brush unit Part No. SPF 57/1




RSM 80	80	137	25	Steel Bracket

Spare brush unit Part No. RSM 80/1

Add suffix "N" if nylon brush is required ie SPFN 57.
Or suffix "B" if steel brush is required ie SPRB 25

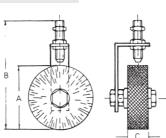

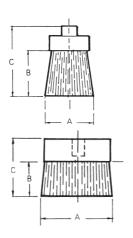





### **BRUSH HOLDER - Adjustable**

No	Α	В	Thread
PHA 60	60	47	1/8 BSP
PHA 80	80	47	1/8 BSP
PHA 120	120	47	1/8 BSP

Material - STEEL

Finish - ZINC PLATE

# BRUSH HOLDER For use with mounting Rail - Swivel

No	Α	В	Thread
PHB 60	60	30	1/8 BSP
PHB 80	80	30	1/8 BSP
PHB120	120	30	1/8 BSP

Material - STEEL

 
Finish - ZINC PLATE

 
## BRUSH HOLDER For use with mounting - Rail - Fixed

 
No	Α	В	Thread
PHC 60	60	30	1/8 BSP
PHC 80	80	30	1/8 BSP
PHC120	120	30	1/8 BSP

Material - STEEL

Finish - ZINC PLATE








## RSMB ANGLE BRACKET FOR USE WITH PHA

Material - STEEL Finish - ZINC PLATE

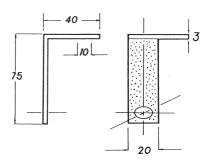

### TS11 MOUNTING RAIL FOR USE WITH PHB and PHC

Material - STEEL



